



**Date:** August 28, 2015  
**Version:** FoxTelem v0.59

# ***AMSAT Fox-1*** **Telemetry Decoder Manual**

## **1 Introduction**

Thank you for downloading the Fox Telemetry Decoder. You can use this program to demodulate, store and analyze telemetry data from AMSAT's Fox series of Cube Sats. We hope that you will also upload the telemetry you receive to the AMSAT server so that it can be used by other Amateur Scientists and our research partners, whose experiments fly with the Fox satellites.

Fox-1 satellites include two telemetry formats:

- Slow Speed, also called Data Under Voice (DUV) is 200 bps FSK data sent at the same time as the transponder audio. Whenever the transmitter is on, data is being sent. This happens during beacons and during live QSOs.
- High Speed is 9600 bps FSK sent instead of the transponder. This is used for data intensive experiments such as the Virginia Tech Camera. This is only active when commanded from the ground. You can recognize High Speed because it sounds like an old school computer modem.

FoxTelem will receive and store both formats assuming you can feed it clean audio or IQ signals from an SDR.

### **1.1 License**

FoxTelem is Copyright (C) 2015 amsat.org

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <<http://www.gnu.org/licenses/>>.

## 2 Table of Contents

1	Introduction .....	1
1.1	License.....	1
2	Table of Contents .....	2
3	Getting Started .....	3
3.1	Installing.....	3
3.2	Running .....	3
3.3	Testing with a wav file .....	4
4	Decoding .....	4
4.1	Selecting a source .....	5
4.2	Setting up the levels .....	6
4.3	Feeding the Audio .....	7
4.4	Decoding from an IQ source such as the FUNCube Dongle.....	8
4.5	Starting the decoder.....	8
4.6	Finding the Satellites Signal .....	9
5	Sending Data to the Server.....	10
6	Understanding the Data.....	11
6.1	Fox Health Screen .....	11
6.2	Graphing Telemetry Values .....	12
6.3	Radiation Experiment.....	14
6.4	Camera Images .....	14
7	Making Measurements .....	14
7.1	Overview .....	14
7.2	Signal to Noise Measurements .....	14
7.3	Azimuth and Elevation .....	15
8	Getting Better Decodes .....	15
8.1	Eye Diagram.....	15
8.2	DUV Filter Settings.....	15
8.3	High Speed Bandwidth.....	16
9	Settings.....	16
9.1	Files and Directories.....	17
9.2	Decoder Options.....	18
9.3	Ground Station Parameters.....	18
9.4	Formatting .....	18
9.5	Debug Options.....	19
10	Spacecraft Configuration .....	19
10.1.1	Spacecraft Configuration File .....	19
10.1.2	Telemetry Layout Files .....	21
10.1.3	Conversions.....	22
11	Troubleshooting .....	23

## 3 Getting Started


### 3.1 Installing

FoxTelem is supplied as an archive file (.zip on windows, .dmg file on MacOS, .gzip on Linux). You can unzip the contents and put it in the directory of your choice. Right on the desktop works well, as does somewhere in your home directory or documents directory. If you install it into MacOS Applications or into the Windows “Program Files” folder, then you will need to choose a different directory to write the decoded data into. You can do this the first time you run the program.

### 3.2 Running


Run FoxTelem by double clicking FoxTelem.exe on Windows or the Application file on MacOS. On Linux, you should be able to double click FoxTelem.jar, or run it from the command line with the FoxTelem start script

If FoxTelem starts then you should have the Welcome screen shown below. The “Simple” install will use the installation directory to store the decoded data. This keeps everything in one place, but mixes the program with its data. If you want to write the data to another directory, then choose “Custom”, click Continue and specify the directory on the next screen.

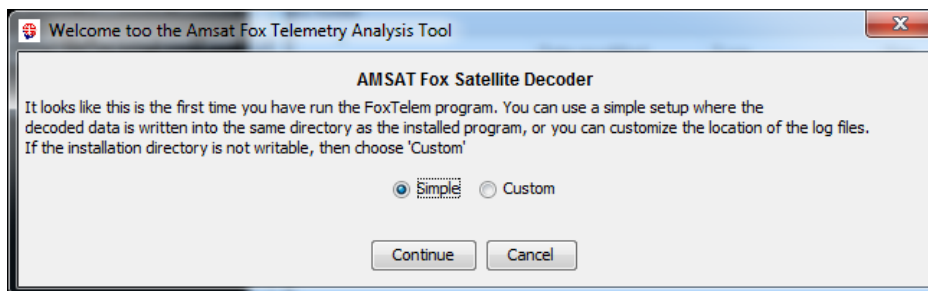

If FoxTelem will not start, then you probably do not have java installed, or have a version before Java 6. You can download and install the latest version from [java.com](http://java.com).

If you get an error message from Windows Smartscreen like the below, then click “More Info” and then “Run Anyway”. Windows gives this message for new or little know applications that have not established a reputation.

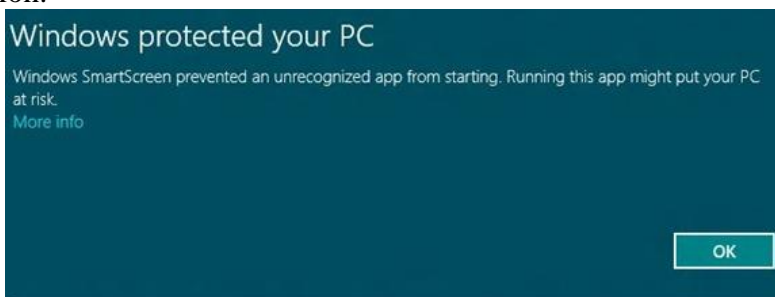

If you are on Windows and the program complains that it is missing MSVCR100.dll or something similar to that, then you need to install the Microsoft Visual C++ redistributable:

For 32 bit windows: <http://www.microsoft.com/download/en/details.aspx?id=5555>

For 64 bit windows: <http://www.microsoft.com/download/en/details.aspx?id=14632>

If you do not know if you have 32 or 64 bit windows then Open System by clicking the *Start* button, right-clicking *Computer*, and then clicking *Properties*. Under *System*, you can view the system type.

If it still won't start, then see the troubleshooting section at the end of the manual or ask for help on the amsat-bb list.

### 3.3 Testing with a wav file


To confirm everything is working you can download a test wav file from <http://www.amsat.org/amsat/ftp/telemetry/>. Select "Load Wav File" from the File menu and navigate to the directory where you saved the file. Then press the start button. If you want to listen to the file at the same time, then press the "Monitor Audio" button.

The file will play through the decoder and the audio waveform will be shown together with an eye diagram. You should get a number of frames decoded.

There should be data visible on the Satellite's tab.

If the data is difficult to read because the font is too

large or too small then open the settings screen from the File menu and change the font size for the Health Modules.

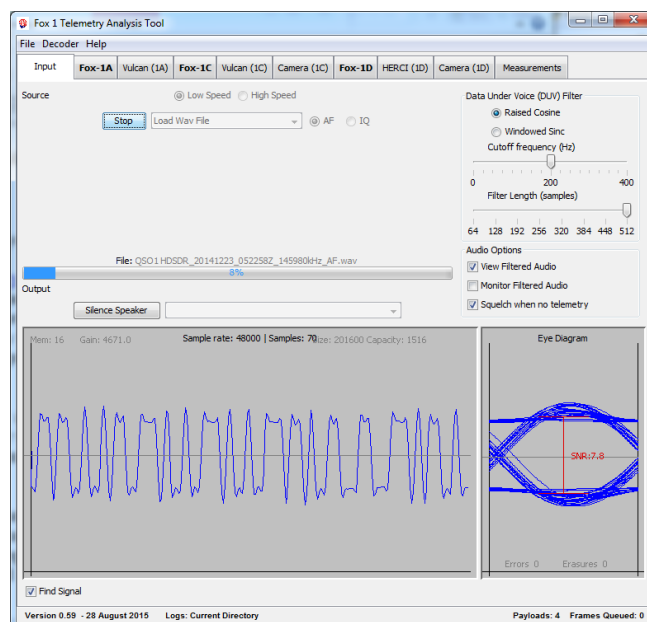


## 4 Decoding

The telemetry for Fox-1 is sent in two different ways. While the transponder is on, low speed telemetry is sent on the same frequency, even while the transponder is in use. This is sent as Data Under Voice (DUV) in the audio band from 0 to 200Hz in the same FM channel as the transponder audio. So while a QSO is in progress, we can receive telemetry from the spacecraft.

This makes certain demands on the ground station. There should be no high pass filtering of the FM audio. Ideally the band from 0 to 200Hz is untouched when it is received from the telemetry decoder. Unfortunately, this is not the case for almost all radios.


What we want to receive is something like below. You can see all of the bits, although there is some "ringing" from filtering in the decoder itself. The eye diagram shows the last set of bits received, drawn one on top of another. We can see a nice shape and it fits into the sample window. The bits are sampled vertically at the midpoint, with the signal to noise shown by the red line. We want a signal to

noise ratio of at least 3. Higher is better. 2 is marginal. We also see the Error rate in the Eye Diagram window. This is updated each time we receive a frame from the satellite and shows the number of bytes that were corrected by the [Reed Solomon](#) Decoder (Errors and Erasures).

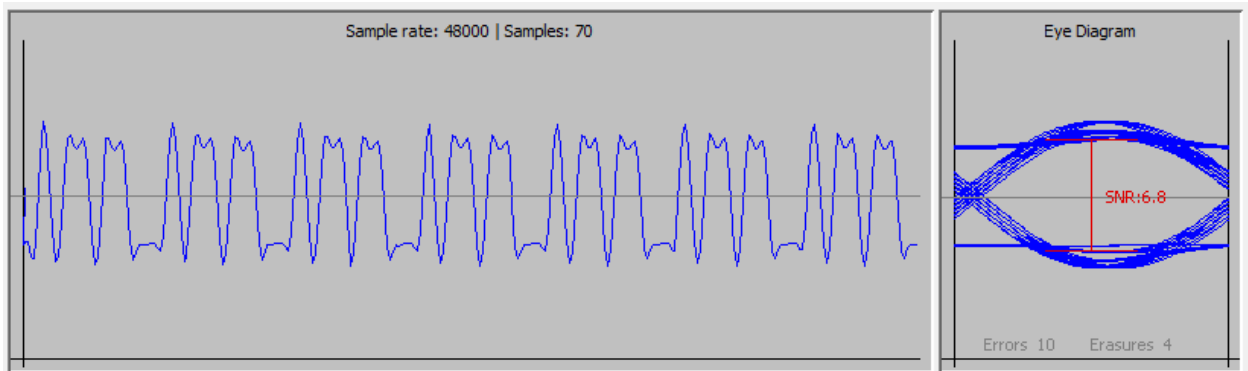

#### 4.1 Selecting a source

FoxTelem decodes audio, but there are many ways for it to source it. On the Input tab you select the source in the pull down box near the top, just to the right of the “start” button. Typically you would pick one of your sound cards and then feed audio into that sound card from a radio. In the example below FoxTelem is reading from the “Microphone” source, it will process Low Speed (Data Under Voice) with a 48000 bits per second sample rate. (This is the sample rate that the sound card has and FoxTelem needs to match it. You can’t change the sample rate that FoxTelem runs at without changing the sample rate of the audio that it receives.) Finally it is expecting normal audio (AF) from a radio.

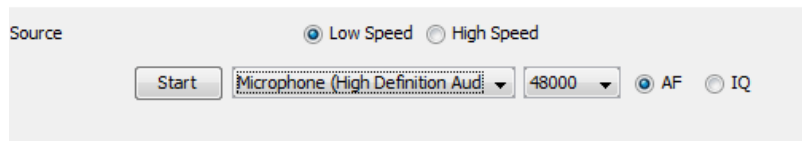


FoxTelem can also read IQ audio and act as a Software Defined Radio (SDR). You do this by selecting a source that supplies In Phase audio on one stereo channel and Quadrature audio on the other. You set the correct sample rate and you choose IQ, rather than AF to the right of the sample rate pull down. If the device is the FunCube Dongle then you should also be able to set the frequency directly, if it is another device then you will need an external program to control it. FoxTelem will just read the audio.

On the Mac, FoxTelem only reads from the default device (this is likely a bug that I need to fix). You can select the default device from System Preferences>Sound then select Input and set the device you want as the sound input.

If you are not seeing any sound card devices on the Mac, then you may have the sample rate set to a level where no sound cards are supported. Try setting it to 48000. If you no longer have a sample rate pull down, then you need to delete the foxtelem.properties file as a work around. This is a known issue.


## 4.2 Setting up the levels

You may need to adjust the sound levels in your operating system. I had to adjust the levels in Windows. From the control panel I selected: Hardware and Sound> Manage Audio Devices> and then adjusted the properties for the sound card on the Custom and Levels tabs.

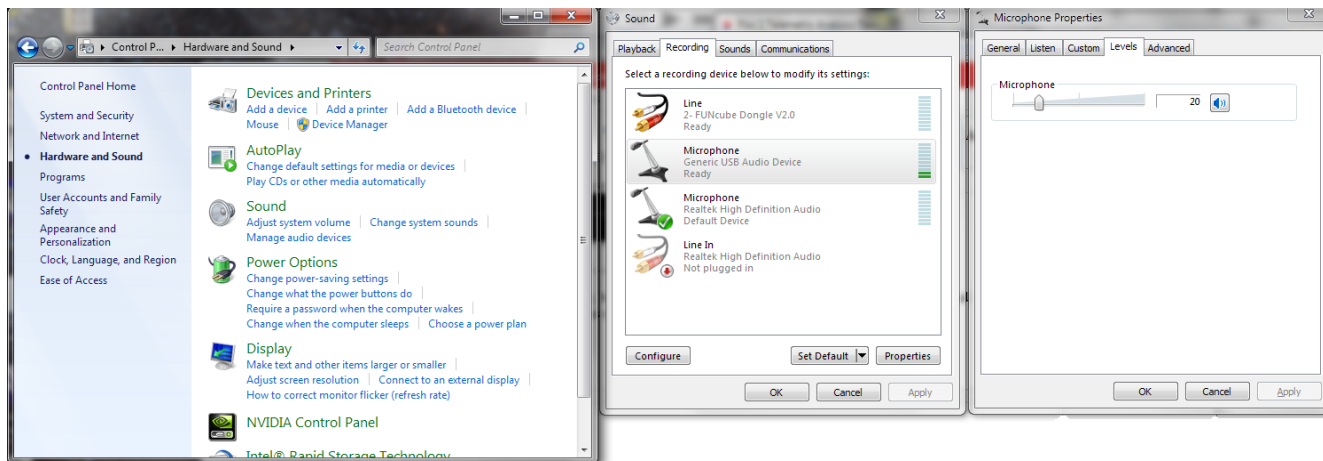

On the Custom tab I unchecked AGC and on the Levels tab I set it to 50. You may have other settings for your sound card.

To set the levels correctly uncheck the “View Filtered Audio”, shown below on the right, and make sure that the signal is visible but does not take up more than half of the display. If its too low, you won’t decode frames, if it is too high you will see it square off on the display. The exact setting is not critical because FoxTelem has some AGC built in. Also note that the white noise when there is no signal is usually much louder, which is to be expected. This may well drive the decoder into distortion. A quiet transponder, which has been keyed, but which has no audio signals in it, should not distort. The spacecraft will still be transmitting telemetry and you can decode it.

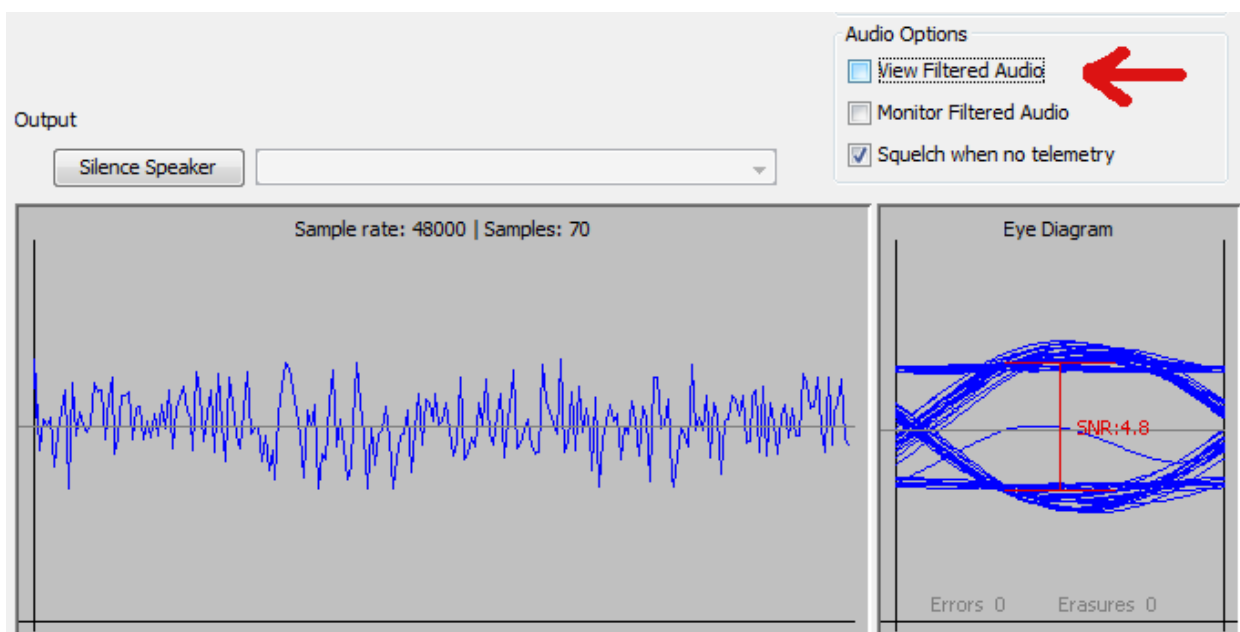


Also note that the sample rate is shown on the Advanced tab. Windows typically defaults it to 44100 and the decoder defaults to 48000. Your Operating System may default to something else. The sample rate in the sound card setup needs to be the same as the sound card sample rate in the decoder or you will get a poor decode rate. The image above shows the sound card rate near the top.


### 4.3 Feeding the Audio

You can wire a cable from the data out port of your radio to both stereo channels of a 3.5mm plug and connected it to the sound card. Select the widest audio bandwidth that you can, because we want a response down to nearly DC. Usually this is a 9600 baud packet setting or a direct feed from the FM discriminator. I got the best results by modifying my FT736R, but my FT817 was also able to decode Fox.

The results from a radio are workable but not ideal. The audio is shown below for the FT-817. Note the shape of the bits. This is characteristic of high pass filtering. The bits start at their full value then steeply slope.

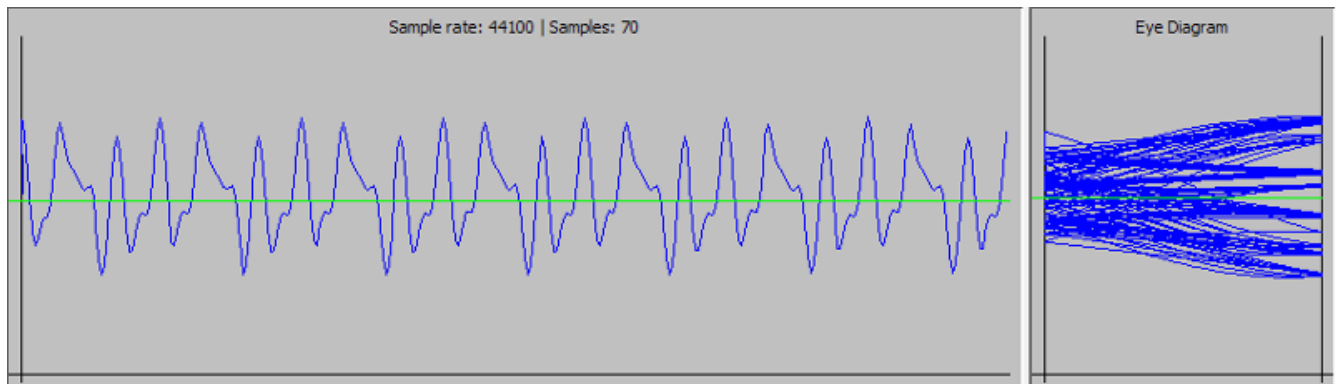

The frequency spectrum shows a null below 20Hz and the FT-817 seems to decode about 10% less frames than the modified FT-736R.

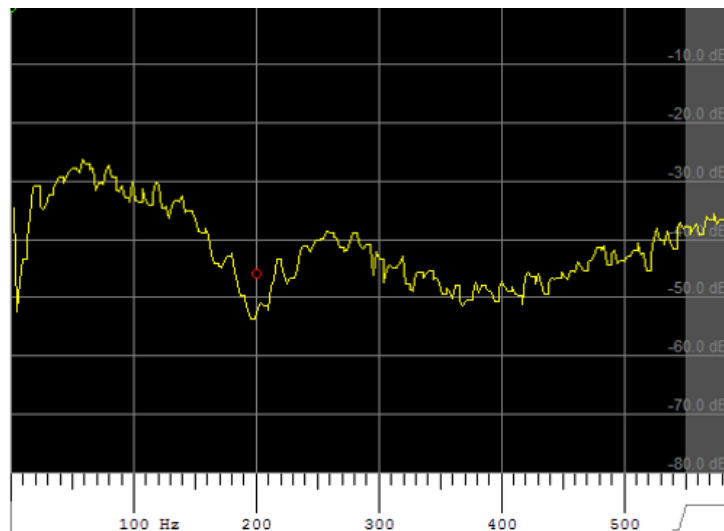

#### **4.4 Decoding from an IQ source such as the FUNCube Dongle**

A software defined radio is a better choice because we get no filtering of the low frequency audio. The Funcube Dongle, for example, can receive the telemetry and pass the IQ baseband audio untouched to FoxTelem.

You have two choices to set this up. Either receive the audio in your favorite SDR software and feed the demodulated FM audio to the telemetry decoder or use the IQ demodulation in the telemetry decoder itself. Both should work. Here are the advantages and disadvantages of using FoxTelem's IQ demodulator:

##### **Advantages**

- FoxTelem will find the satellites signal when it appears and will follow the Doppler. You do not need a separate application to set the frequency
- FoxTelem will measure the parameters about the received signal, such as Time of Closest Approach (TCA), that AMSAT would like to collect and analyze.
- You don't need to use another piece of software, such as Virtual Audio Cable, to connect the two programs. Or feed the audio out of the computer and back in again with a physical cable.

##### **Disadvantages**


- A separate SDR program may have better capabilities than the SDR in the Telemetry Decoder.
- Your existing SDR may already be configured to work with Doppler correction software

In either case, you should receive bits that are something like image below in "Starting the Decoder" (which is using the IQ demodulation in the decoder and shows the Frequency spectrum).

#### **4.5 Starting the decoder**

The start button kicks off the decoder and FoxTelem reads audio from the audio source that you selected. If this is audio from a separate SDR program such as SDR# or HDSDR then make sure the AF radio button is selected and the sample rate is the same as your sound card or SDR/Virtual Cable. If it is IQ audio from the Funcube Dongle or another SDR, then make sure that the IQ radio button is selected.



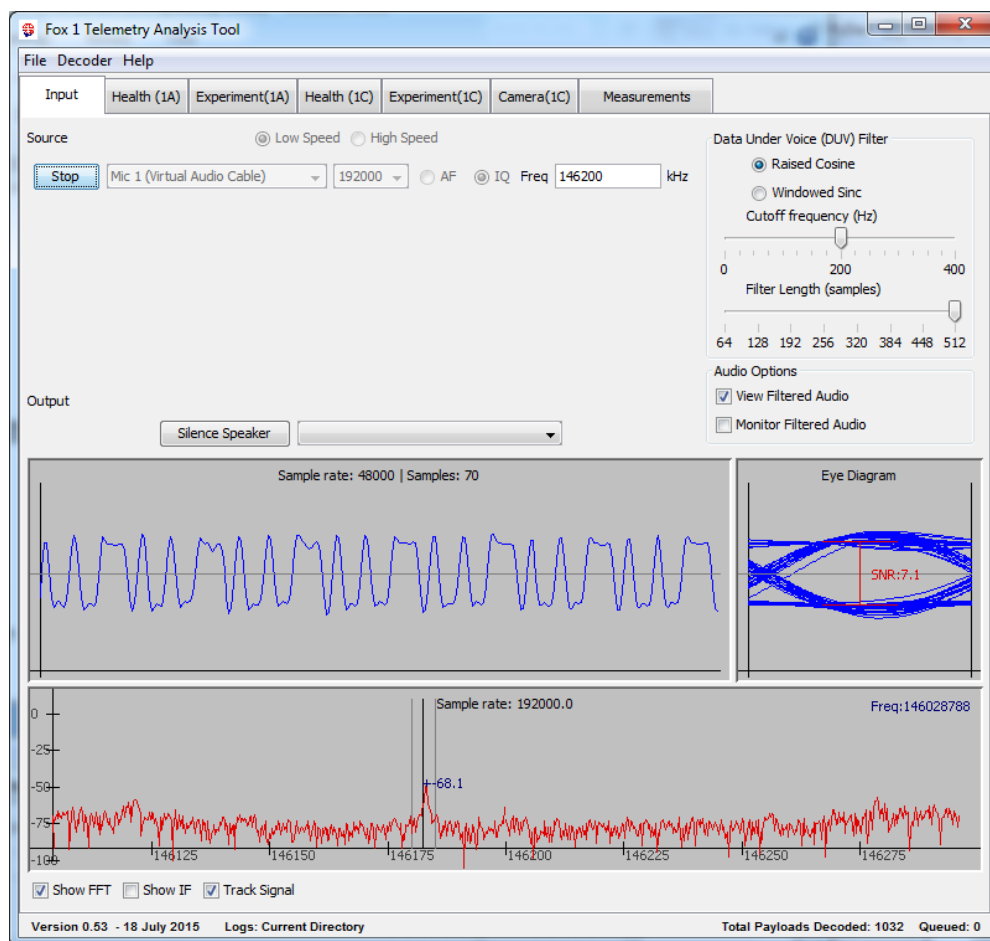


If you are receiving from the Funcube Dongle then setting the frequency will change the frequency that the dongle is tuned to and set the correct filters. For any other SDR, you will need to use a separate control program to set the frequency and any filters. In both cases, the frequency will be shown as the center frequency on the RF spectrum. This is not the frequency that you are receiving, which is shown by the vertical line. FoxTelem will measure the receiver frequency by calculating the offset from the center.

## 4.6 Finding the Satellites Signal

FoxTelem can monitor several satellites if they fit into the pass band. For example, with the center frequency set to 145930, Fox-1A, Fox-1C and Fox-1D can all be monitored if 192kHz of spectrum is available.

If “Find Signal” is selected (just below the frequency spectrum) then FoxTelem will monitor the frequencies close to the expected downlink. The scan range is set by the `minFreqBoundkHz` and `maxFreqBoundkHz` parameters in the spacecraft files. These are described in the Spacecraft Configuration File section later in this manual.

## AMSAT Fox-1 FoxTelem Manual

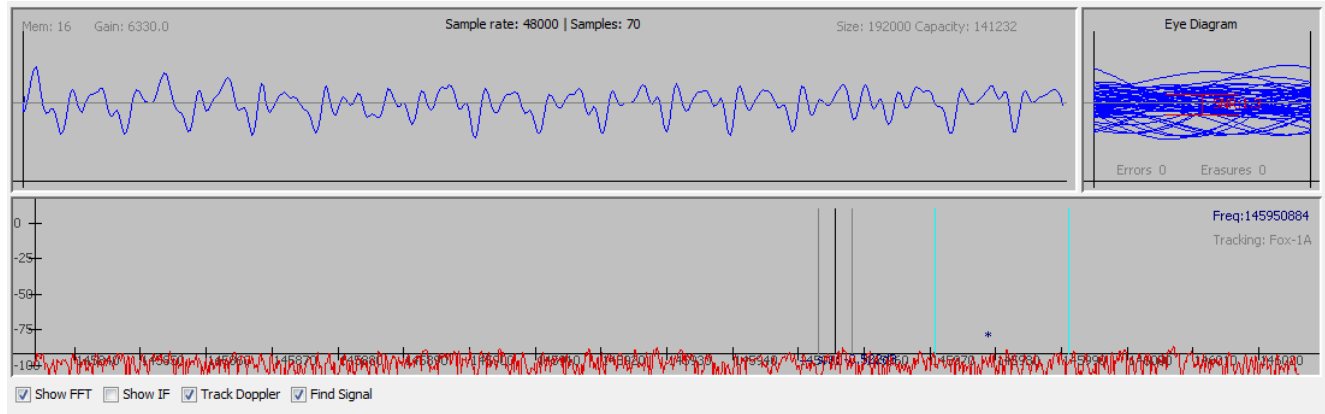


When FoxTelem finds a signal in the expected frequency range, it checks to see if it contains valid satellite telemetry. If it does, then it pauses the scan and decodes the data in the normal way. You should leave Track Doppler checked if you want FoxTelem to follow the doppler on the satellite.

If the signal is lost then FoxTelem waits 2 minutes before resuming the scan. This is the period between beacons and will allow FoxTelem to track a pass when the satellite is in Safe Mode or when the transponder is not in use.

After 2 minutes, if no signal is received, then FoxTelem assumes the pass is over and scanning is resumed.

## 5 Sending Data to the Server

You can help the research of students at participating Universities and contribute to the design and build of future AMSAT satellites by sending your received telemetry frames to the AMSAT server.

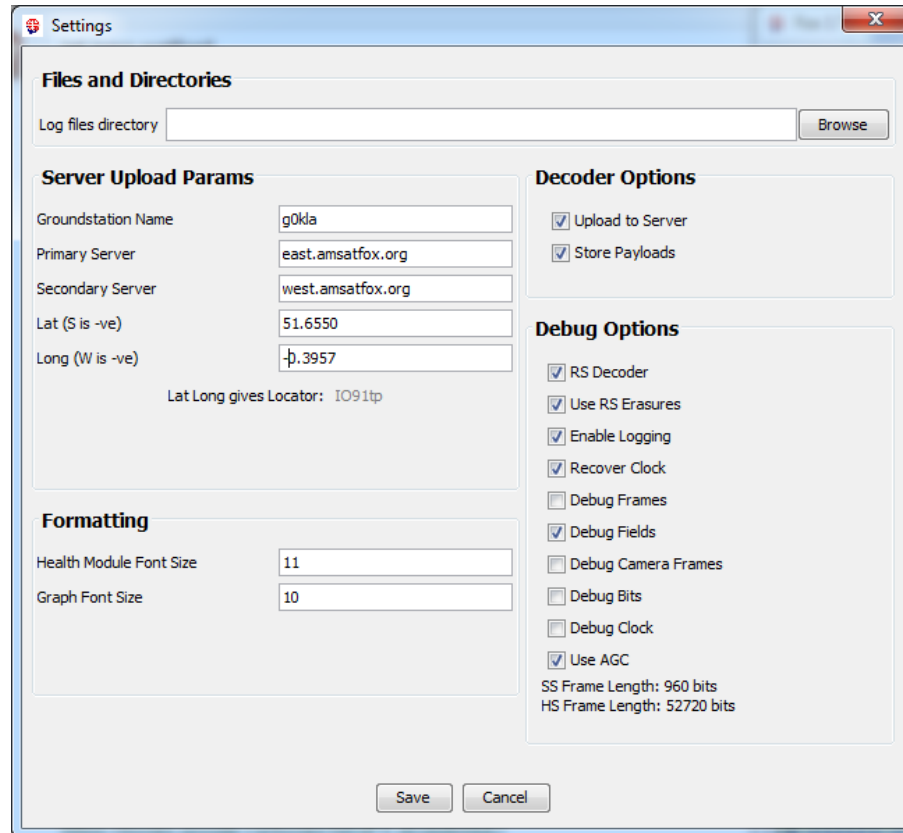

To send data first open the Setting screen from the File menu. Select the checkbox labeled “Upload to Server”. You then need to supply your Amateur Radio callsign or some other unique identifier (e.g., "Collin County Elementary School"). The identifier can also have an optional additional identifier so KA2UPW is valid, but so is KA2UPW-9 (indicating a second station this callsign is using to also collect telemetry) or something like KA2UPW-FM13 (this is indicating a grid square where the station is collecting telemetry).

You also need to supply latitude and longitude of your ground station. This calculates the grid square that you are in as a check.


There are two AMSAT servers. It does not matter which one you send to. By default one is the primary and the other is the secondary. If either server is down, the program will automatically send data to the other sever.

## **6 Understanding the Data**

### **6.1 Fox Health Screen**

The health screen shows the latest real time values received from the spacecraft at your ground station. It also shows the latest Maximum and Minimum values. You can access previous values by clicking on the telemetry row and a graph will open up. Data can then be analyzed and extracted. See the Graphing section below.


# AMSAT Fox-1 FoxTelem Manual

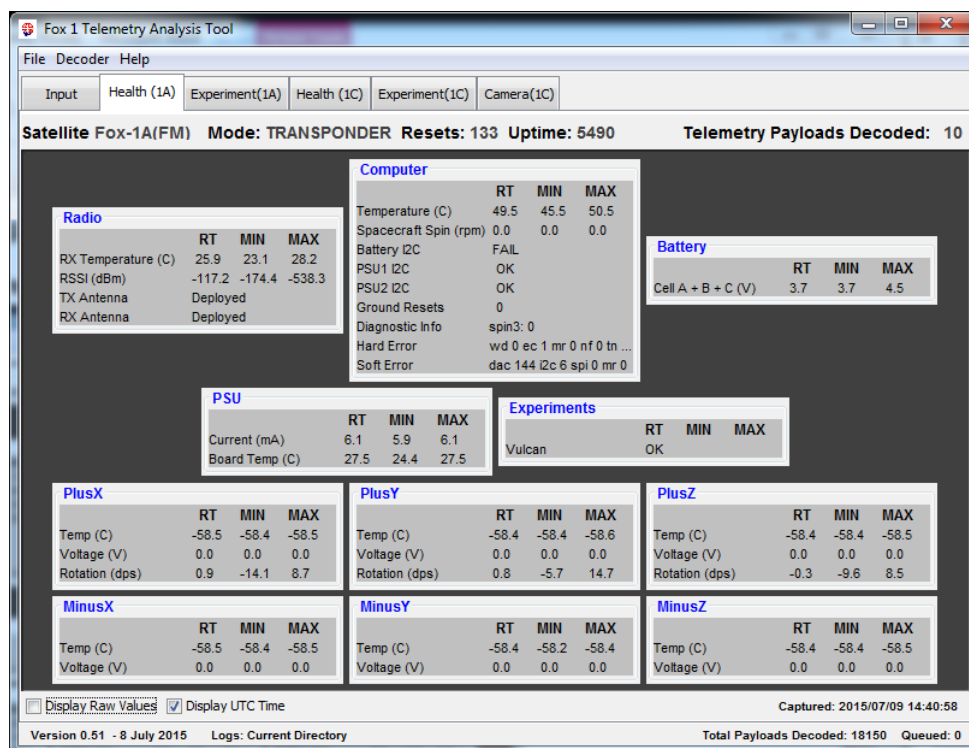

## 6.2 Graphing Telemetry Values

A graph opens when a telemetry row in the health tab is clicked with the mouse. By default the graph shows the last 180 readings. A real time value is downloaded once every 10 seconds or so in slow speed telemetry mode. So 180 readings is about 1800 seconds of data, or 30 minutes. This will therefore show a complete pass of the satellite without changing the settings.

The graph below shows the Internal Temperature of the onboard computer or Internal Housekeeping Unit (IHU). The time axis is recorded on the spacecraft and shows Uptime in seconds since the last reset, with the reset number underneath the first Uptime label.

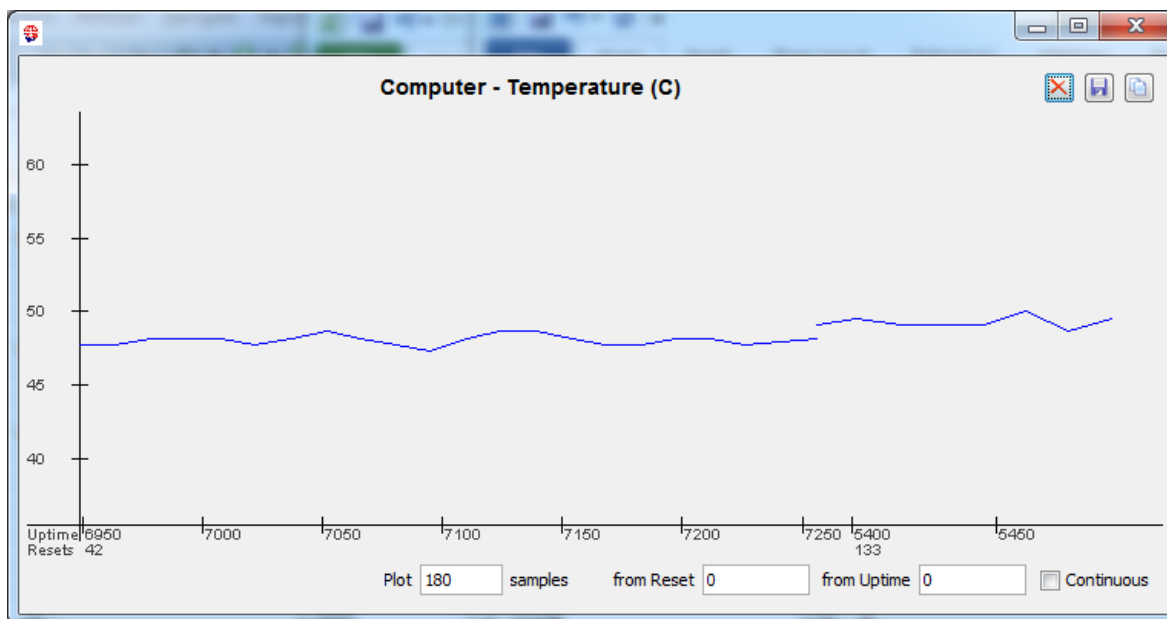

You can plot more or less samples by changing the number from 180 and hitting enter.

By default the “from Reset” and “from Uptime” are set to zero. These are ignored and the graph automatically selects the latest samples and plots them. This shows a continuously updating graph for real time monitoring of the spacecraft. This is probably what you want if you are listening live to a satellite pass.


If you change the “from Reset” and “from Uptime” you can plot a subset of the data. This will no longer automatically grab the latest samples from the spacecraft, but rather will plot samples forward from that reset/uptime. If that includes the latest samples, then you will still see them appear live. If it does not, then the data will remain static. If you are completely confused and the graph is not doing what you want, then hit the red X button in the top right to reset the graph to its default values.

If no data is received from the spacecraft for some time, then you probably do not want to plot it. In that case, the graph automatically cuts out blank sections of the data. This allows you to see several passes one after the other, without large gaps in between them. If you want to show the data in the right positions on the graph's timeline then tick “Continuous”.

There are three ways to copy data from the graph.

Firstly, your Operating System probably has a print screen function. In Windows Alt-PrntScr will copy just the active window and will allow you to paste the result into another document.

If you want to have just the graph itself, then use the Copy button in the top right. The previous graph is shown below, copied in this way.

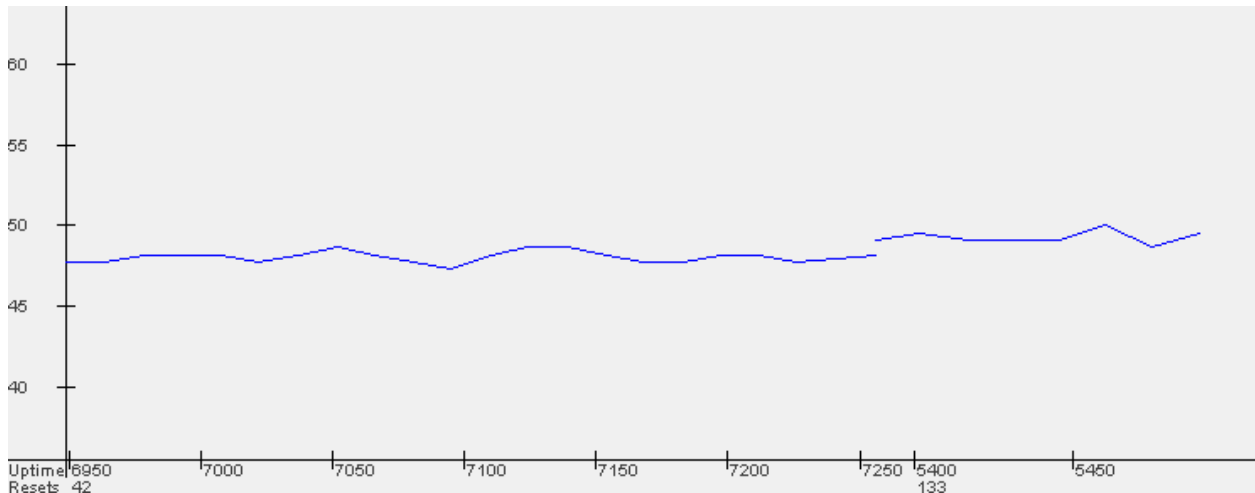

Finally, you can save the data values to a csv file using the save button. This will save the subset of data that you have selected for display.

### 6.3 Radiation Experiment

### 6.4 Camera Images

Camera Images are downloaded in High Speed telemetry mode if the Virginia Tech Camera is present on the spacecraft. Fox-1A does not have a Camera, but Fox-1C and other spacecraft will.

## 7 Making Measurements

### 7.1 Overview

In addition to the telemetry and science data received from the satellite, you can make measurements at your ground station and store them for analysis. Out of the box, FoxTelem can measure:

- Signal To Noise level of the received bits
- Signal To Noise level of the RF (in IQ mode)
- RF signal strength (in IQ mode)
- Azimuth and Elevation (using the DDE interface on Windows)
- Frequency (in IQ mode or using the DDE interface on Windows)
- Time of Closest Approach (TCA) through Doppler analysis (in IQ mode) – not yet implemented

Each of these measurements are stored at the time a frame is detected and they are timestamped with both the current UTC time and with the reset/uptime that was on the received frame. This gives a sample about every 5 seconds.

### 7.2 Signal to Noise Measurements

Signal to noise measurements can be used to optimize your station. Store the results and compare them when you have made changes. What difference does a pre-amp make? A higher gain antenna? A different receiver? What is the difference in signal to noise vs elevation at your QTH (ground

station location)? Does the RF signal to noise ratio correlate with the bit signal to noise ratio? Which should be optimized?

### 7.3 Azimuth and Elevation


FoxTelem can not read your rotator directly (at least not yet), but it can grab the information from SatPC32 using its DDE interface. This will only work on Windows. See the DDE Interface section of SatPC32's manual for details on setting it up.

This is useful information and I am open to suggestions on how best to store it when using other prediction software or on Linux and MacOS. Please email me.

## 8 Getting Better Decodes

### 8.1 Eye Diagram

A subtle distortion in the eye diagram like the plot on the left perhaps shows a mismatch between the sample rates at some point in the chain. A much better eye diagram is shown on the right.

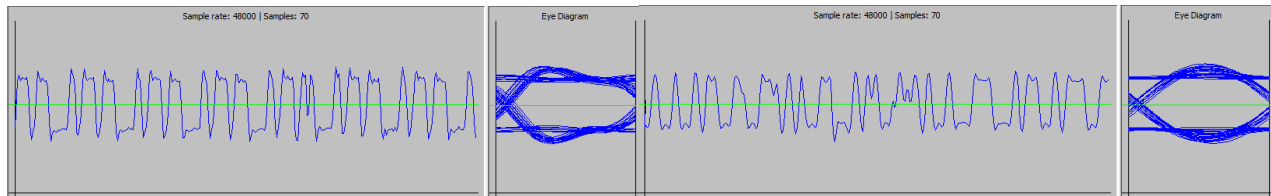


First of all, set the sample rate to 48000 samples per second if possible. This divides evenly into 200 bps and 9600 bps and gives slightly better decodes. With a strong signal it makes no difference, but if the signal is distorted or weak then it can help.

Secondly, make sure that the sound card or audio source is also set to 48000. Windows likes to set everything to 44100 by default, so you need to go into the Control Panel to change it. If you are using a virtual cable to connect an SDR to FoxTelem, then be aware that when initially started cables will be defaulted to 44100 by Windows. FoxTelem or the SDR can not then reset them to 48000. Virtual Audio Cable is a good example of this and it mentions the issue in its manual. When you configure a new cable you give it a range of sample rates. Windows will then pick 44100 if it is available. Even if that is not what you wanted. So I setup two cables, and narrowed the range of sample rates to one value. One cable is then for 48000 and the other is for 192000. Then there is no question about the rate that Windows will give them.

### 8.2 DUV Filter Settings

You probably don't need to change the Filter settings, but it can be fun to play with it. If you get confused, the default values are shown to the right.

The DUV filter separates the telemetry, which is below 200Hz from the QSOs that are in progress on the transponder or from the voice

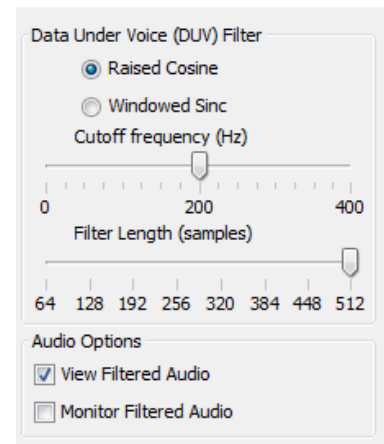

announcements in the beacons. We use a sharp digital filter to separate the bands.

Ideally we would use a matched filter, such as a root raised cosine, with the same filter being applied on the satellite. Fox is very busy with other things, such as running experiments and taking photos, so the filtering on the spacecraft is very light (computationally). We therefore work a bit harder at the ground station and run a [Raised Cosine](#) filter or a [Windowed Sinc](#) filter.

In theory a Sinc filter would be the ideal choice, because it is a brick wall filter. It can not be implemented however, so we “window”, meaning multiply, the filter by a blackman window. This gives it a more rounded shape.

Fox defaults to a 200 bits per second (bps) Raised Cosine Filter with 512 coefficients (or taps). See what happens to the eye diagram and the pulse shape when you change the length or the cut off frequency.

You can use the audio options to change what is shown in the audio graph. The default is that you are viewing filtered audio, so you see the bits. If you uncheck View Filtered Audio then you will see the raw audio as it is received.

On the other hand, by default you are hearing unfiltered audio, so you can hear a QSO if it is in progress. If you check Monitor Filtered Audio then you will hear the audio after it is filter. The bits sound like a low rumble.

### **8.3 High Speed Bandwidth**


High speed data from Fox is 9600 bits per second FSK. The FM signal is 20kHz wide. Make sure that the radio you are using is on a wide enough setting to accommodate.

## **9 Settings**

The settings screen is accessed from the File menu. This contains 5 types of options:

- Files and Directories
- Decoder Options
- Server Upload Parameters
- Formatting
- Debug Options



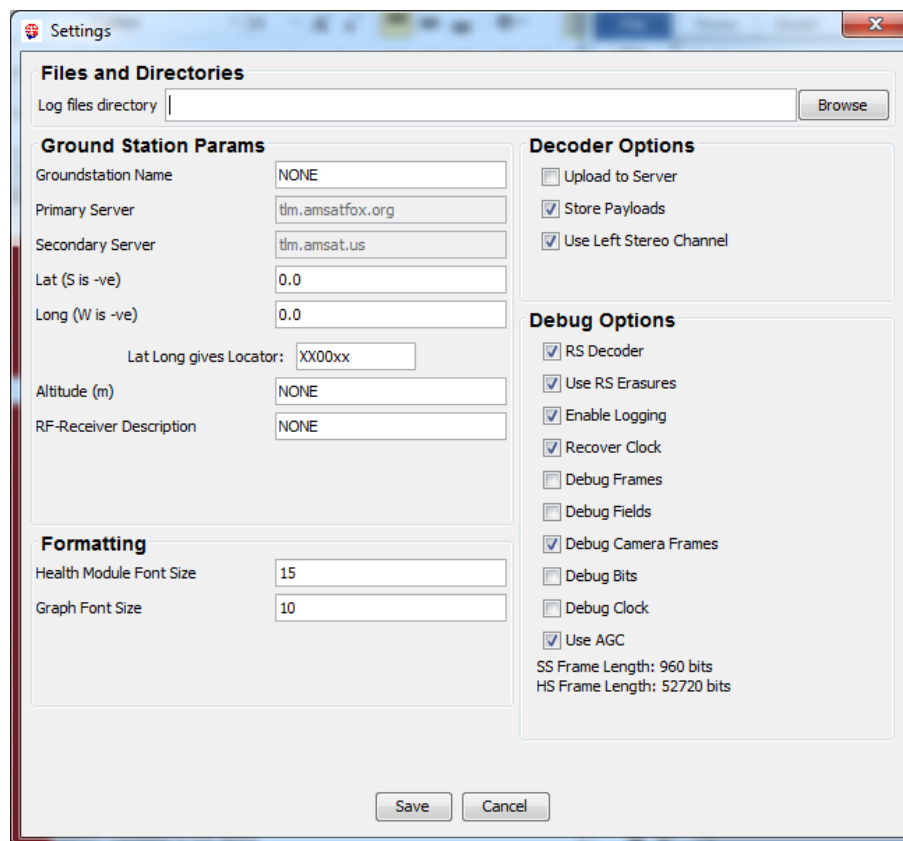

## 9.1 Files and Directories

This sets the directory that the downloaded telemetry data is stored in. FoxTelem has a number of files that it stores on disk. It's worth describing them first. They are as follows:

- spacecraft - directory that stores the spacecraft configuration files
- images - directory that stores images downloaded from the Virginia Tech Camera (if present)
- seq.dat - file that stores the next sequence number to be sent to the server
- rawHSframes.log - queue of the high speed frames to upload to the server
- rawDUVframes.log - queue of the low speed frames to upload to the server
- FoxTelemDecoder.log - the log file from FoxTelem. Updated if the Setting "Enable Logging" is checked.
- FoxTelem.jar - The FoxTelem core program classes
- FoxTelem.properties - The FoxTelem settings that are stored between program executions. Editable from the File>Settings screen and elsewhere in the program. Not designed to be user editable
- Fox3jpg\_index.dat - An index file the stores the images that have been downloaded from the VT Camera. Present on Fox-1C

- `Fox1rtttelelemetry.log` – Your log of the real time payloads downloaded from Fox-1A. Additional log files will be created for other satellites. You do not need to send this data to Amsat. This is your own personal archive for experimentation and analysis
- `Fox1radtelelemetry.log` – Your log of the radiation bytes downloaded from the Vanderbilt Radiation Experiment on COTS memory chips.
- `Fox1mintelelemetry.log` – Your log of the minimum values payloads
- `Fox1maxtelelemetry.log` – Your log of the maximum values payloads
- The payload log files are comma delimited and follow the order of the Telemetry layout files in the Spacecraft directory. You can load them into your favorite spreadsheet program for further analysis or use the graphing functions in FoxTelem.

## 9.2 Decoder Options

**Upload to Server** – select this if you want to send your collected data to the AMSAT telemetry server. You will need to supply some of the Ground Station parameters if you check this option, specifically a Ground Station Name and your location.

**Store Payloads** – uncheck this if you do not want to store the payloads on disk

**Use Left Stereo Channel** – The default is for FoxTelem to read audio from the left stereo channel of your soundcard. If you uncheck this it will read from the right. There is no issue if you supply audio to both channels. This setting is ignored in IQ mode, when both channels are read.

## 9.3 Ground Station Parameters

**Ground station name** is the unique identifier that you will use to store data on the AMSAT telemetry server. If you are a licensed Amateur Radio Operator, we recommend you use your callsign. Otherwise use the name of your organization or something else that will be unique. This is limited to 32 characters.

To be clear, we do not enforce uniqueness. We only use the name to keep track of how many frames each station supplied.

**Primary and Secondary server** should not need to be changed

**Latitude / Longitude or Locator** need to be specified if you supply decoded data to AMSAT. You can either enter a Maidenhead locator or your lat/long. One will calculate the other

**Altitude** will be supplied to AMSAT along with your data if you specify it.

**RF-Receiver** can be specified to give us an idea of the types of stations that are in operation. This is limited to 50 characters.

## 9.4 Formatting

**Health Module Font Size** – change the size of the font on the Satellite tabs so that it is more readable or so that it fits in the space available

**Graph Font Size** – change the size of the font on the graph axis

## 9.5 Debug Options

**Debug Frames:** Print out information about the decoded frames, such as the start and end bit positions, the payload type, the number of erasures and corrections.

**Debug Fields:** Print out the decoded payloads field by field, so that you can see all of the raw values in the log file.

**Debug Camera Frames:** Print out details of the camera frames. Very verbose. Prints one line for each byte in the camera payload. This will not work when listening live and needs to be run against a recording

**Debug Bits:** Very verbose. Prints out the bit level showing the 10b words and their 8b decode.

**Debug Clock:** Prints out details of the clock recovery, showing how much the clock was adjusted each time it was updated.

## 10 Spacecraft Configuration

The spacecraft directory contains a number of files that are used to setup FoxTelem for each Fox Satellite. As more Fox Satellite are launched, we will supply more configuration files. The directory contains a set of files such as the following, with additional files if more Satellites are configured or more experiments are onboard.

- FOX1A\_fm.dat - The spacecraft configuration file for the Fox 1A Flight Model. This is the one that is flying in space.
- FOX1A\_rttelemetry.csv - the layout file for the Real Time Telemetry Payloads and the configuration needed to display them in FoxTelem
- FOX1A\_mintelemetry.csv - the layout file for minimum values payloads
- FOX1A\_maxtelemetry.csv - the layout file for maximum values payloads
- FOX1A\_rssiFM.tab - a lookup table for the Received Signal Strength telemetry raw value. There are several look up tables for each satellite.
- jpeg\_header.out - Virginia Tech's header file for the JPEG images that will be part of FOX-1C

### 10.1.1 Spacecraft Configuration File

A spacecraft configuration file exists for each Fox satellite that you wish to receive data from. We will supply new files as new Fox satellites are launched. If you edit this file, make a backup of the existing file.

The data is stored in a java "properties" file which consists of key-value pairs. A line either starts with a #, meaning it is a comment, or it has a key followed by an = then the value.

The valid keys are:

## AMSAT Fox-1 FoxTelem Manual



**foxId** - this is the id of the satellite, where 1 = 1A, 2 = 1B etc. You can not load two satellite configuration files with the same foxid

**catalogNumber** - this is the NOAA catalog number for the satellite and is unused currently

**name** - this is the name that is displayed in FoxTelem for this satellite. E.g. Fox-1A

**description** - this is a helpful description so we know which satellite we are talking about

**model** - this is the model number where 0 = Engineering Model, 1 = Flight Model and 2 = Flight Spare

**IHU\_SN** - this is the serial number of the IHU board

**EXPx** - this indicates what is in experiment x slot, where x is 1 - 4. The value is then a number, which indicates the following:

- 0 - Experiment slot is empty
- 1 - Vanderbilt Vulcan Radiation Experiment
- 2 - Virginia Tech Camera
- 3 - IOWA State HERCI Experiment
- 4+ are currently reserved for future use

**telemetryDownlinkFreqkHz** - the transmit frequency for the downlink telemetry, e.g. 145980 for Fox-1A

**minFreqBoundkHz** - reserved for future use

**maxFreqBoundkHz** - reserved for future use

**BATTERY\_CURRENT\_ZERO** - the calibration point for zero battery current, e.g. -1.839 for Fox-1A

**rssiLookupTableFileName** - the lookup table to use for RSSI values

**ihuTempLookupTableFileName** - the lookup table to use for the IHU temperature. Specific to each IHU Serial Number

**ihuVBattLookupTableFileName** - the lookup table to use for Battery Voltage

**rtLayoutFileName** - the layout file for the RT Telemetry

**maxLayoutFileName** - the layout file for the MAX Telemetry

**minLayoutFileName** - the layout file for the MIN Telemetry

**radLayoutFileName** - the layout file for the Radiation Telemetry

**measurementsFileName** - the layout file for the measurements made locally at your ground station

**passMeasurementsFileName** - the layout file for the measurements made for each satellite pass

**useIHUVBatt** - set to true if the IHU is used to measure Battery Voltage, rather than the Battery Board.

### 10.1.2 Telemetry Layout Files

The telemetry layout files contain a row for each value in the telemetry. These are read by FoxTelem when it starts and are used to parse the received telemetry once it has been demodulated. The first row of the file contains the number of rows, followed by the column names. The number of rows specified then follows, with a value REQUIRED in each column. The file is comma delimited and is easiest to edit in a spreadsheet program such as Microsoft Excel. Make sure you save it as a csv file again.

The columns are as follows:

**TYPE** - For information only. RT, MAX, MIN or RAD. Ignored by the program

**FIELD** - The name of the field. Must be unique. Used by FoxTelem to keep track of the value internally.

**BITS** - The number of bits in the field. (As a side note Fox sends bits with the most significant bit first, but it is little endian, so we get the least significant byte first. This made the decoder more entertaining to write.)

**UNIT** - The units that the telemetry value will have after we convert the raw value. This is displayed on screens and graphs.

**CONVERSION** - The conversion routine to run on the raw value. This is an integer value. See Conversions below to understand what the integers mean.

**MODULE** - The name of the module on the "Health" tab that this value should be displayed in. If RT, MAX and MIN are displayed on the same line, then this only needs to be set in the RT layout file.

**MODULE\_NUM** - The number specified determines the order of the modules on the Health tab. The first module should be "1". Modules then follow numerically. Modules starting with "10+" are displayed in the lower half of the screen.

**MODULE\_LINE** - This is the line in the module that the value is displayed on, starting with line 1.

**LINE\_TYPE** - A numeric value, with the following meanings:

0 - Display value in the Real Time column only on this line. E.g., Antenna Status has no Max or Min value. Confusingly, we use this to display things like "Soft Error" which is only in the MIN Values Payload. So we specify the module and module line for it, but give it LINE\_TYPE 0

1 - Display value in the MAX column - never used

2 - Display value in the MIN column - never used

3 - Display values in ALL columns - used for most values

**SHORT\_NAME** - The name that is displayed on the Health Tab for this telemetry value .

**DESCRIPTION** - The description that appears when the mouse is hovered over this value.

### 10.1.3 Conversions

It turns out that taking raw values measured by Analog to Digital Converters (ADCs) on the spacecraft and converting them into real, accurate measurements across multiple satellite, is non trivial. We have therefore specified 23 conversion routines and will add more in the future as they are needed. The numbers refer to the following conversions

Integer	Name	Description	Conversion
0	<b>CONVERT_NONE</b>	Use the raw value as is	None
1	<b>CONVERT_INTEGER</b>	Use the raw value as an integer	Round to zero decimal placed
2	<b>CONVERT_V25_SENSOR</b>	Treat the raw value as a reading by the 2.5V ADC	Raw * 2.5/4096
3	<b>CONVERT_V3_SENSOR</b>	Treat the raw value as a reading by the 3V ADC	Raw * 3/4096
4	<b>CONVERT_BATTERY</b>	Convert the raw value into a battery voltage depending on the resistor network used to apply the value to the ADC	Battery A uses the 2.5V ADC, Battery B uses the 2.5V sensor / 0.76, Battery C uses the 2.5V sensor / 0.5
5	<b>CONVERT_SOLAR_PANEL</b>	Convert the raw value from the solar panels	Raw * 3V ADC / 0.428
6	<b>CONVERT_SOLAR_PANEL_TEMP</b>	Converts the raw value to a temperature in Celsius	Lookup the value in the Solar Panel Temperature Table, held inside FoxTelem
7	<b>CONVERT_TEMP</b>	Converts the raw value to a temperature in Celsius	Lookup the value in the Temperature Table, held inside FoxTelem
8	<b>CONVERT_BATTERY_TEMP</b>	Converts the raw value to a temperature in Celsius	Lookup the value in the Battery Temperature Table, held inside FoxTelem
9	<b>CONVERT_BATTERY_CURRENT</b>	Calculate the positive or negative battery current in mA given the voltage across a sense resistor	$((\text{rawValue} * 2.5\text{V ADC} - 0.05) * \text{Battery Zero Value (in the spacecraft file)} + 2) * 1000$
10	<b>CONVERT_PA_CURRENT</b>	Calculate the PA current in mA given the voltage across a sense resistor	$((\text{rawValue} * 3\text{V ADC}) / 50 / 0.2) * 1000$
11	<b>CONVERT_PSU_CURRENT</b>	Calculate the PSU current in mA given the voltage across a sense resistor	$((\text{rawValue} * 3\text{V ADC}) / 0.003)$
12	<b>CONVERT_SPIN</b>	SPIN is 3.8 fraction fixed point.	If raw value > 2 <sup>11</sup> (2048) - 1 then value = value - 2 <sup>12</sup> (4096). This gives a signed value which we then divide by 256 to get a signed double
14	<b>CONVERT_RSSI</b>	Converts the raw value to the Received Signal Strength in dBm	Lookup the value in the RSSI table, which is specified in the Spacecraft configuration file
15	<b>CONVERT_IHU_TEMP</b>	Convert the raw value to the IHU internal temperature in Celsius	Lookup the value in the IHU Temperature table, which is specified in the Spacecraft configuration file
16	<b>CONVERT_ANTENNA</b>	Convert the 2 bits into values for	0 = Stowed, 1 = Deployed

## AMSAT Fox-1 FoxTelem Manual



Integer	Name	Description	Conversion
		the antenna deployment status	
17	<a href="#"><i>CONVERT_STATUS_BIT</i></a>	Convert the bit into a status value	0 = OK, 1 = FAIL
18	<a href="#"><i>CONVERT_IHU_DIAGNOSTIC</i></a>	A set of diagnostic bits that are converted into values for debugging the IHU	
19	<a href="#"><i>CONVERT_HARD_ERROR</i></a>	Watchdog status and the type of error that last reset the spacecraft	
20	<a href="#"><i>CONVERT_SOFT_ERROR</i></a>	Other non fatal errors	
21	<a href="#"><i>CONVERT_BOOLEAN</i></a>	Convert the bit into a boolean value	0 = FALSE, 1 = TRUE
22	<a href="#"><i>CONVERT_MPPT_CURRENT</i></a>	Calculate the current from the Maximum Power Point Tracker (if installed) based on the voltage across a sense resistor	$(\text{rawValue} * 2.5\text{V ADC}) / 2.5$
23	<a href="#"><i>CONVERT_MPPT_SOLAR_PANEL</i></a>	Calculate the voltage for each solar panel, as measured by the Maximum Power Point Tracker	$\text{rawValue} * 2.5\text{V ADC} * (6.54/2.42)$
24	<a href="#"><i>CONVERT_MPPT_SOLAR_PANEL_TEMP</i></a>	Calculate the temperature of each solar panel, as measured by the Maximum Power Point Tracker	Lookup the value in the MPPT Solar Panel Temperature table
25	<a href="#"><i>CONVERT_16_SEC_UPTIME</i></a>	Convert Vulcan uptime to seconds	$\text{rawValue} * 16$

## 11 Troubleshooting

Symptom	Solution
Poor decodes or no decodes	<ol style="list-style-type: none"> <li>1. Is the sample rate different to the sound card? Has Windows (or another OS) set the sound card up with 44100, even though you told it not to?</li> <li>2. Is Virtual Audio Cable (VAC) or another similar audio transport running at a different rate?</li> <li>3. Is your SDR outputting audio at a different rate?</li> <li>4. Is the volume set to high and the wave form is distorted?</li> <li>5. What is the Signal to Noise ratio of the eye diagram – assuming you have one? It should be 2+, preferably 6+</li> </ol>
Decoder stalls when a frame is received	<ol style="list-style-type: none"> <li>1. Is the bit level debugging on, or some other verbose debugging? Check on the File&gt;Settings screen</li> <li>2. Has the FoxTelemDecoder.log file grown to a huge size?</li> <li>3. Are you nearly out of disk space?</li> </ol>
I am using HDSDR and I have missing lines in the images I am receiving from the Virginia Tech Camera onboard Fox-1C (or another Fox sat)	We have seen a bug in HDSDR where it skips a few bits and the decode is corrupted. Set the Bandwidth to 96000 in HDSDR and the Sample

## AMSAT Fox-1 FoxTelem Manual



	Rate to 96000 in VAC (if you use it) and in FoxTelem. This should work around the issue.
FoxTelem does not start when I launch it	<ol style="list-style-type: none"> <li>1. Maybe you have a FunCube dongle connected to your computer and it has crashed. Try unplugging the dongle and restarting FoxTelem.</li> <li>2. If you edited the spacecraft files, perhaps something is causing FoxTelem to crash. Try putting the default spacecraft files back in place.</li> <li>3. See if the file FoxTelemDecoder.log has been created in the installation directory. See if this contains and error messages.</li> <li>4. Try running FoxTelem from the command line to see if any errors are reported to the console.</li> <li>5. If a file called foxtelem.properties has been created in the installation directory, you could manually edit it and set logging=true. Then try again and see if error messages are written to the console or to the FoxTelemDecoder.log file.</li> <li>3. If FoxTelem ran previously, try renaming foxtelem.properties temporarily. FoxTelem will create a new properties file when it starts up.</li> </ol>
I try to run the FoxTelem.exe file on Windows and it tells me that it is missing MSVCR100.DLL or a similar error	<p>This is the Microsoft Visual C library and should already be installed with Windows. An aggressive Uninstall application may have removed it from your system. See this help article from Microsoft:</p> <p><a href="http://answers.microsoft.com/en-us/windows/forum/windows_other-performance/msvcp100dll-missing/9a687c31-0619-4ee9-b511-020985e29b5f">http://answers.microsoft.com/en-us/windows/forum/windows_other-performance/msvcp100dll-missing/9a687c31-0619-4ee9-b511-020985e29b5f</a></p>
I'm confused about Java on the Mac. Apple do not seem to support it anymore, what is going on?	<p>Before MacOS 10.7 (Lion) you need to install the Apple supplied version of Java (version 6). You should be able to do this through Software Update in the System Preference.</p> <p>Apple no longer maintains the Java runtime environment, so post 10.7.3 you need to install the latest runtime environment, which you can download from java.com.</p> <p>If you are on 10.7.1 or 10.7.2 then you need to upgrade to 10.7.3 because missing APIs in those version prevent java from running.</p>
I try to run FoxTelem on the Mac and it tells me that it is a "legacy" app and I need an old version	To maintain compatibility with older Macs (see the question above) we have made FoxTelem




<p>of Java</p> 	<p>compatible with Java 6 even though we compile it with the latest compiler. FoxTelem will run with the latest version of Java. You do not need to install Java version 6 from Apple. Go to Java.com and install the latest version.</p>
<p>The Frequency Spectrum is truncated in IQ mode and only seems to show the middle part. See Figure 1.</p>	<p>Even though you may have set FoxTelem to the right sample rate (e.g. 192000 or 96000) the audio source you are reading from is supplying audio at a lower rate. Figure 1 shows FoxTelem expecting samples at 192000 and receiving samples at 48000.</p>

Figure 1: Too narrow a bandwidth on audio device used for IQ source

